

AR-260

BodyHoist Basic instructions



Lever



Balance point



Suspention point headband



Adjust the shoulder width



Handle to unlock fingers


1. Lifting

- Adjust the shoulderwidth as desired by the two possibilities; the fixed shoulderwidth and the stepless shoulderwidth
- Place the Bodyhoist with opened fingers glide along the deceased and let it rest completely on the table so that the forks closes automatically.



2. Adjustment

- Make sure that the Shoulderwidth Rods are between the shoulders and elbows.
- Support the head by positioning the headband.
- Adjust the balancepoint as desired.

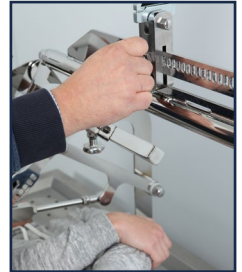

3. Transfer

- Lift the deceased calmly and check that the balance is correct and the deceased person is respectfully in the Bodyhoist.
- When desired; lift the deceased further. Never lift higher than necessary to avoid risks as much as possible.



4. Positioning

- Position the BodyHoist above the coffin.
- Check of the BodyHoist can be placed between the walls of the coffin.
- When desired; lower the BodyHoist to let the deceased rest on the bottom of the coffin. If not as desired; adjust the BodyHoist again.



5. Vice versa

- Open the fingers when the deceased is at the bottom of the coffin by pulling the red handle upwards.

To lift a deceased out of a coffin, follow this process vice versa.

Use the finger lever when the fingers do not close automatically.

